

REPLACEMENT PARTS LIST

K & F Series

Two-Stage Condensing and Non-Condensing Furnaces
with Fixed Speed and Variable Speed Blowers

**NON-CONDENSING GAS
FURNACES (80%+ AFUE)**



**CONDENSING GAS FURNACES
(UP TO 95% & UP TO 97% AFUE)**



80%+ AFUE	*G7TA-1 Upflow / Horizontal, Fixed Speed - Replacement Parts List.....	2
	*G7TA-1 Upflow / Horizontal, Variable Speed - Replacement Parts List	3
	*G7TA-1 Upflow / Horizontal - Component Location	4
	*G7TK-1 Downflow, Variable Speed - Replacement Parts List.....	5
	*G7TK-1 Downflow - Component Location.....	6

UP TO 95% AFUE	*G7TC-1 Upflow / Horizontal, Fixed Speed - Replacement Parts List.....	7
	*G7TC-1 Upflow / Horizontal, Variable Speed - Replacement Parts List	8
	*G7TC-1 Upflow / Horizontal - Component Location.....	9

96% AFUE	*G7TE-1 Upflow, Fixed Speed - Replacement Parts List.....	10
	*G7TE-1 Upflow, Variable Speed - Replacement Parts List.....	11
	*G7TE-1 Upflow Only - Component Location.....	12
	*G7TN-1 Downflow, Fixed Speed - Replacement Parts List	13
	*G7TN-1 Downflow, Variable Speed - Replacement Parts List.....	14
*G7TN-1 Downflow - Component Location	15	

*Model description may be prefixed with an alphanumeric character

**UP TO
95% AFUE**

***G7TC-1 UPFLOW / HORIZONTAL, FIXED SPEED - REPLACEMENT PARTS LIST**

DESCRIPTION	060D-E24B1	080D-E35C1	100D-E35C1	120D-E45D1
Blower Control Board	920920	920920	920920	920920
Blower Housing	297207R	297209R	297209R	297209R
Blower Housing (with Wheel)	—	—	—	—
Blower Limit Switch	626611R	626611R	626611R	626611R
Blower Motor	622683	622684	622684	622685
Blower Wheel	667374R	1017727R	1017727R	1017727R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664473R	664243R	664244R	664245
Control Board	920916	920916	920916	920916
Door Set	904768	904769	904769	904770
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard, "J") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, "23") (Not Shown)	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Fuse	632261R	632261R	632261R	632261R
Gas Valve	921691	921691	921691	921691
Heat Exchanger	904792	904793	904794	904795
High Temperature Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	1003442	1003442	1003442	1003442
Inducer Orifice	669719R	669713R	669716R	Not Used
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Inshot Burner	661128R	661128R	661128R	661128R
Main Air Limit Switch	626598R	626615R	626612R	626612R
Motor Choke	—	622340R	622340R	622340R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R
Outlet Header Box	904802	904803	904803	904804
Pressure Switch (Condensate)	632550R	632547R	632547R	632554R
Pressure Switch (Inducer)	632515R	632546R	632548R	632516R
Roll-Out Limit Switch	626610R	626610R	626610R	626609R
Set of Wires (Not Shown)	M0036015R	M0036017R	M0036017R	M0036017R
Top Panel	2A9512R	2A9513R	2A9513R	2A9513R
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 6.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 9.

**UP TO
95% AFUE**

***G7TC-1 UPFLOW / HORIZONTAL, VARIABLE SPEED - REPLACEMENT PARTS LIST**

DESCRIPTION	060D-V24B1	080D-V35C1	100D-V35C1
Blower Control Board	922016	922016	922016
Blower Housing	297207R	297209R	297209R
Blower Housing (with Wheel)	—	—	—
Blower Limit Switch	626611R	626611R	626611R
Blower Motor	622683	622684	622684
Blower Wheel	667374R	1017727R	1017727R
Burner Assembly	904829	904830	904831
Burner Tube Manifold	664473R	664243R	664244R
Control Board	920916	920916	920916
Door Set	904768	904769	904769
Door Switch	632693R	632693R	632693R
Drain Tube (Hard, "J") (Not Shown)	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R
Drain Tube (Soft, "23") (Not Shown)	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R
Fuse	632261R	632261R	632261R
Gas Valve	921691	921691	921691
Heat Exchanger	904792	904793	904794
High Temperature Hose (Not Shown)	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S
Inducer Limit Switch	626599R	626599R	626599R
Inducer Motor	1003442	1003442	1003442
Inducer Orifice	669719R	669713R	669716R
In-Line Drain Assembly	664435R	664435R	664435R
Inshot Burner	661128R	661128R	661128R
Main Air Limit Switch	626598R	626615R	626612R
Motor Choke	—	622340R	622340R
Motor Mount Kit	904907	904907	904907
Orifice (Natural Gas)	661045R	661045R	661045R
Outlet Header Box	904802	904803	904803
Pressure Switch (Condensate)	632550R	632547R	632547R
Pressure Switch (Inducer)	632514R	632546R	632555R
Roll-Out Limit Switch	626610R	626610R	626610R
Set of Wires (Not Shown)	M0036025R	M0036026R	M0036026R
Top Panel	2A9512R	2A9513R	2A9513R
Transformer	622341R	622341R	622341R
Tube (Soft, 6.5") (Not Shown)	663727R	663727R	663727R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 9.

*G7TC-1 UPFLOW / HORIZONTAL - COMPONENT LOCATION

